

# // COFFEE MUG WARMER

## User Manual



Model: TB-019



# Catalog

● Product Features

02 

● Quick Start

04 

● FAQ

08 

● Specifications

12 

● How to Clean?

13 

● Safety Precautions

15 

● Disclaimer

17 



# // Product Features



# // Product Features

0.9in



The compact mug warmer is stylish and powerful.



59in

The 59 inch plug cord fits your desk perfectly.



# // Quick Start

## How to use


1

Take out the coaster, put the cup on the coaster.



2

Plug the delivered power cord into the socket, connect the power supply.

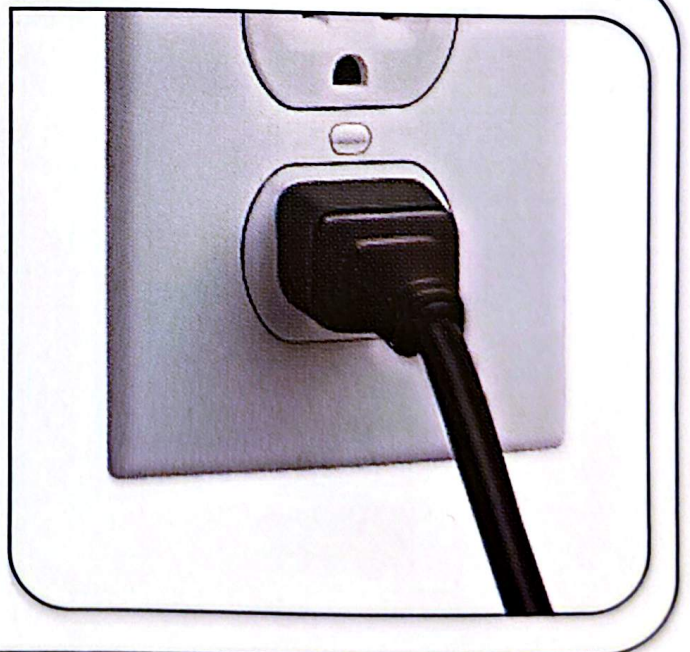



# // Quick Start

## How to use

3

Turn on the switch and choose the temperature you want.



4

Enjoy your drink









# // Quick Start

## 2-level temperature setting

1. It defaults to the off state after being powered on.
2. Press the switch button once to turn on the machine.  
When the machine is turned on, it defaults to the first gear with a temperature of 131°F(55°C), and the indicator light is red.
3. Press the switch button again to set it to the second gear with a temperature of 113°F(45°C), and the indicator light is purple.



131°F  
(55°C)

High-temp: 131°F (55°C)

The red indicator light is on,  
suitable for coffee, tea, etc



113°F  
(45°C)

Low-temp: 113°F (45°C)

The purple indicator light is on,  
suitable for milk, honey water, etc



## // FAQ

### Can I use it to heat cold water?

This product is designed to keep a cup of hot coffee, soup or other beverage at perfect drinking temperature. It is not intended to heat a cold drink, only to maintain an ideal drinking temperature.

#### Notes:



If you place a cold drink, it will take a long time to heat up. It is recommended to place a warm drink for better use.

### Does this coaster have an auto-shutoff function?

This coffee mug warmer does not have a timer function. You must manually turn it off when the cup is empty or when leaving the room.





## // FAQ

### What kind of cup can be heated?

#### Applicable:

Use a thin-walled, flat, or slightly concave-bottomed mug for the best results. This coffee cup warmer is suitable for tableware, stainless steel cup, mug, milk box, glass cup and etc.


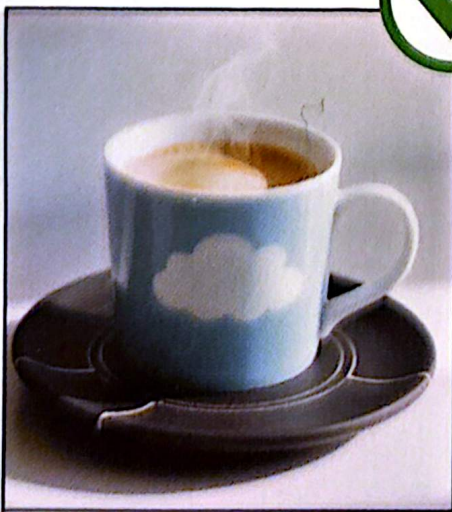
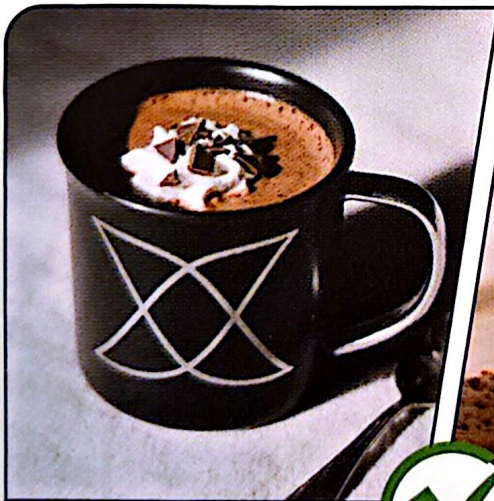




## What kind of cup can be heated?

### Not Applicable:

Insulated cups and double-layer insulation cups will not be able to be heated, and ceramic cups with grooves have a poor insulation effect. (The larger the dent over 3mm, the slower the heat transfer)

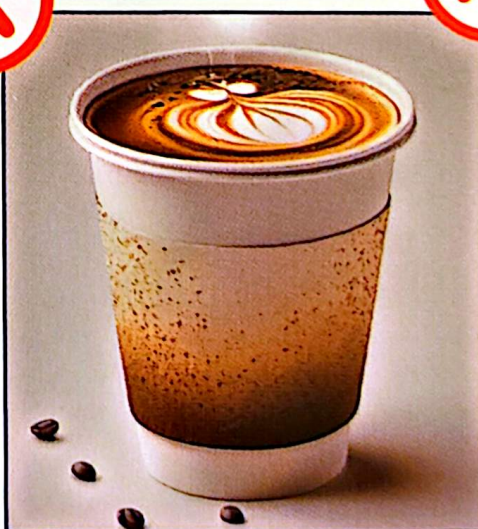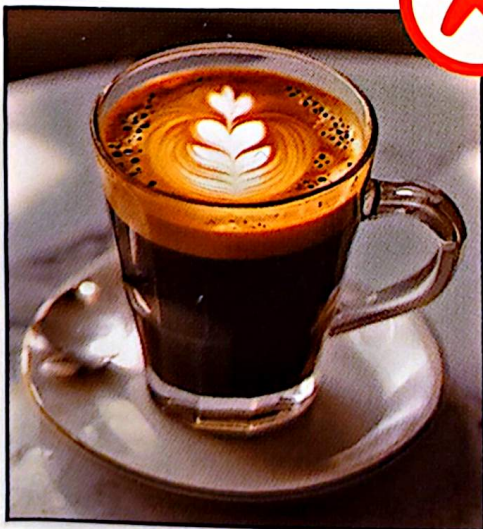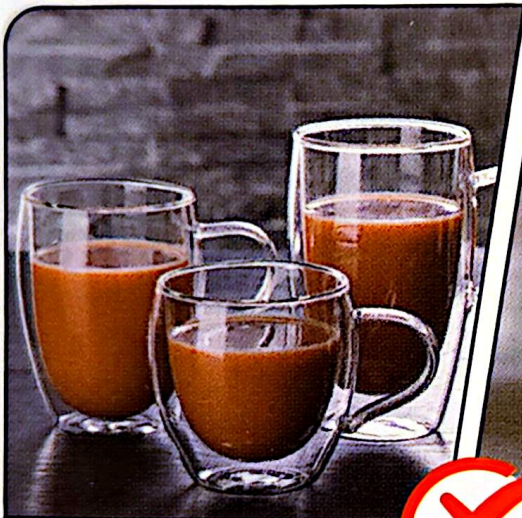



### Who can I contact if my product is damaged?

Please contact the customer service of the purchasing shop.



## // Specifications

|                     |                                               |
|---------------------|-----------------------------------------------|
| <b>Name</b>         | <b>Coffee Mug Warmer</b>                      |
| <b>Model</b>        | <b>TB-019</b>                                 |
| <b>Color</b>        | <b>Black/Wood grain</b>                       |
| <b>Voltage</b>      | <b>AC110~120V</b>                             |
| <b>Frequency</b>    | <b>60Hz</b>                                   |
| <b>Power</b>        | <b>18W</b>                                    |
| <b>Cable Length</b> | <b>1.5 m/59 inch</b>                          |
| <b>Package</b>      | <b>Mug Warmer x1<br/>Instruction Manualx1</b> |



## // How To Clean?

The mug warmer is very easy to clean, just wipe it with a paper towel or damp cloth.





# // How To Clean?

## Notes:



1. Always disconnect the unit before cleaning



2. To remove stubborn soil use a mild non -abrasive cleaner



3. Do not use metal cleaning pads or abrasive cleaners



4. Do not immerse in water



5. Do not place in dishwasher



# // Safety Precautions

When using electrical appliances, basic safety precautions should always be followed including the following

- Read all instructions before using appliance.
- Do not touch the heating plate when the product is on.
- To protect against electric shock, do not immerse cord, plug or base unit in water or other liquid.
- Do not touch the power plug with wet hands.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning.
- Do not move appliance when supporting a container of hot liquid.



# // Safety Precautions

---

- Do not place the mug warmer next to a bathtub or other water container.
- The mug warmer must not be used where there are flammables, and the cup warmer must not be cleaned with flammable solvents.
- Please cut off the power immediately and clean the liquid if you pour a large amount of beverage into the heating plate by accident.
- If the power cord is damaged, it must be replaced by professional dispatched by the maintenance department or a similar department of the manufacturer to avoid danger.
- Do not use appliance for any other use beyond the instruction. It is made for household use only.
- If there is a strange odour, noise or abnormal heat, please disconnect immediately and contact customer service.